


INSTRUCTIONS FOR DEPRESSURISATION

Once tapping has finished, it is mandatory for the keg to be depressurised with the dedicated key (Fig. 2) or by breaking the PRV if there (fig. 3). The dedicated key shown in Fig. 2 is suitable for all types of Polykeg® valves: A, D, G, K, M, S and can be fixed to the top as shown in Fig. 1. It is forbidden and dangerous to dispose of the keg with residual internal pressure as it may burst and cause harm to persons and/or things.

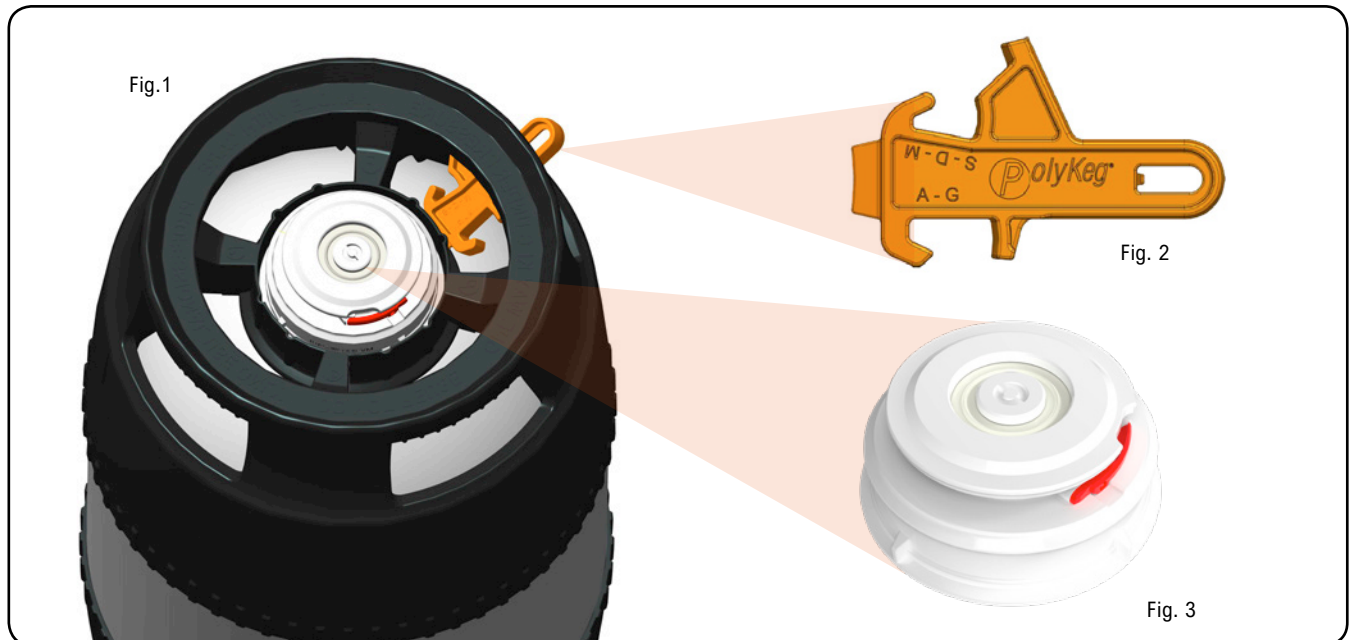

10.1 DEPRESSURISATION PROCEDURE

1. Wear personal protective equipment (goggles, gloves...).
2. Ensure that the area, where PolyKeg® will be depressurised, is well-ventilated.
3. Once the PolyKeg® is disconnected from the tapping system, remove any residual product from the keg valve.
4. Completely depressurise the keg (0 BAR 0 PSI) with the dedicated key (fig. 4) and/or by breaking the PRV (fig. 5).

